

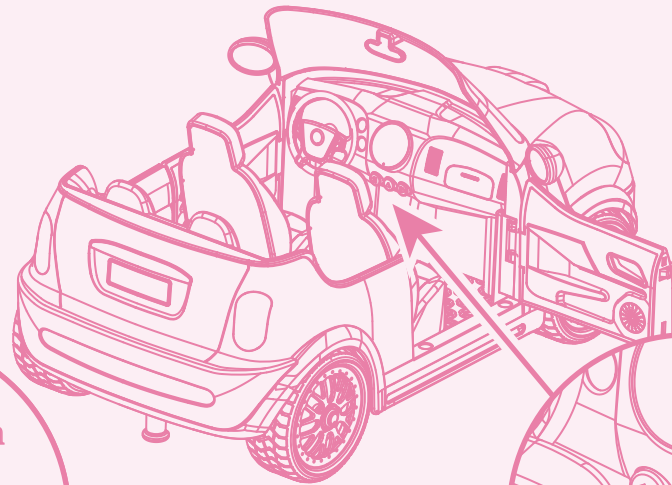
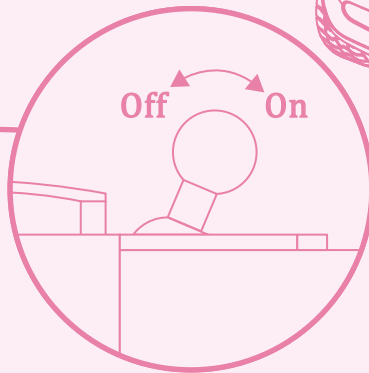


# LORI

## Go Everywhere! Convertible Car™


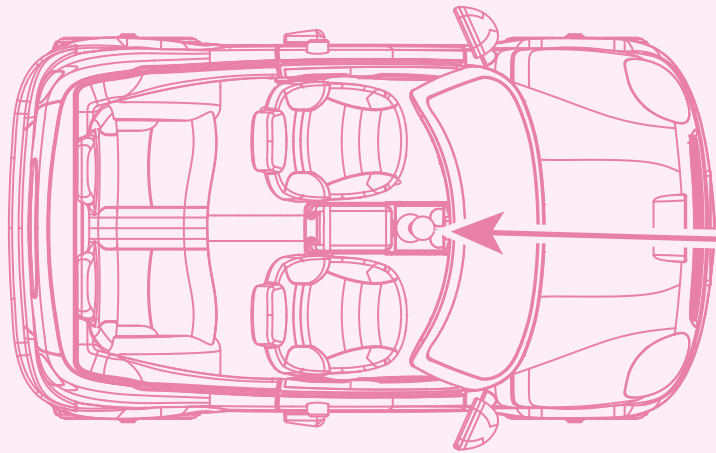


FM radio

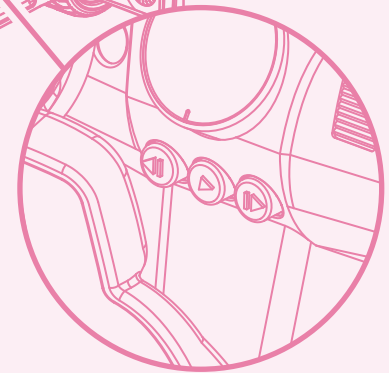

- Volume down
- Scan
- Volume up

**Radio automatically turns off after 5 minutes.**  
To reactivate the radio, move lever back to **OFF** and then to **ON** again.

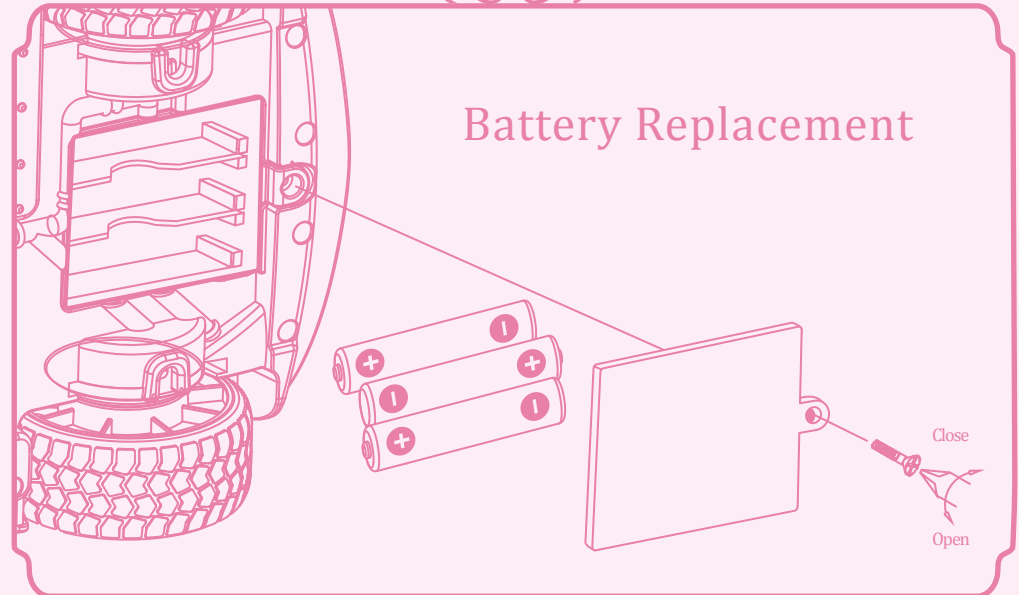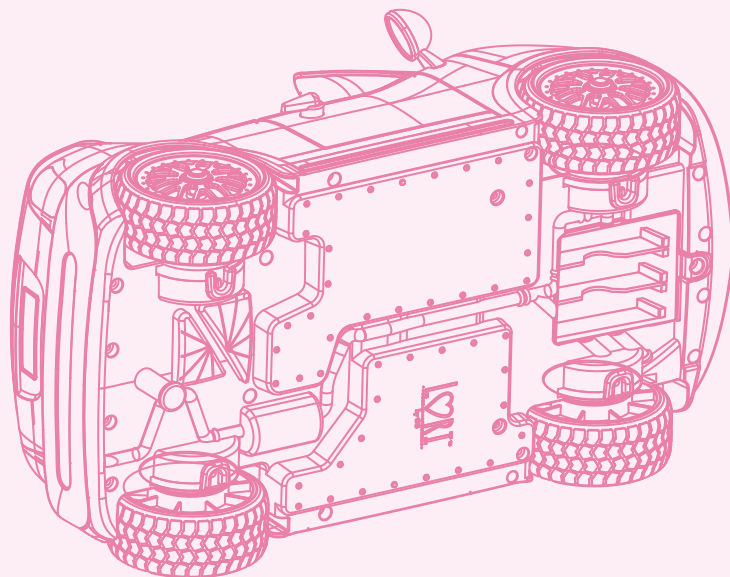

### Battery Replacement

L037064

**⚠ WARNING:**  
**CHOKING HAZARD** - Small parts.  
Not for children under 3 years.

The normal function of the product may be disturbed by strong Electro Magnetic Interference. Reset the product to resume normal operation by following the instruction manual.

**CAUTION:**  
Uses 3 x AA (1.5V) size batteries - Included  
Do not mix old and new batteries.  
Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.  
Do not dispose of this product in fire.  
Batteries inside product may explode or leak.

**Attention:** Please keep the packaging materials and screws away from children.